

SINCE 1983

BLOWER & IMPACT PULVERIZER MACHINES




EXPORTING TO **12** COUNTRIES



 *Shubh Sagar* **INDUSTRIES** AHMEDABAD

STRUCTURAL INFORMATION

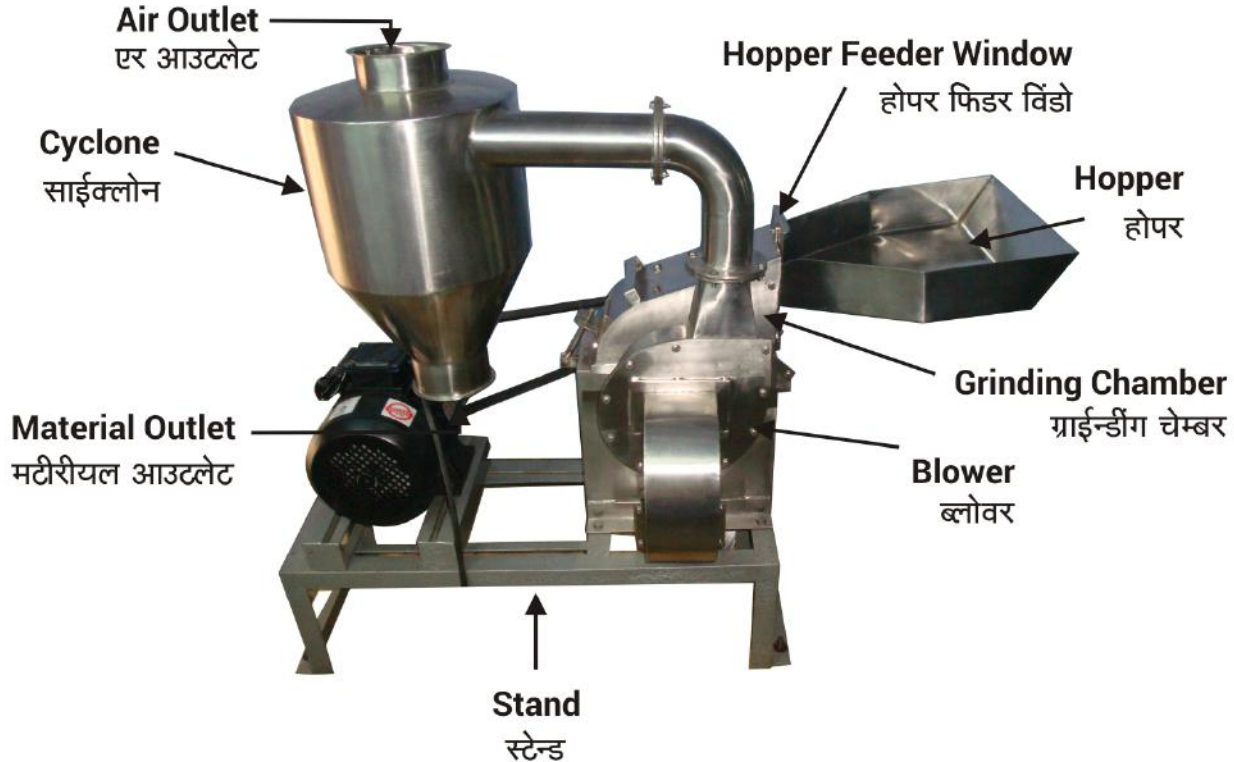

USE & FEATURES

सभी प्रकार के मसाले, जैसे की हल्दी मीर्च, काली मीर्च, धनिया, (तज) दालचीनी, लौंग, जीरा, ईत्यादी । आयुर्वेदिक हर्बस एवं सूके पत्ते आमचूर सूके फल का पल्प ईत्यादी ।

विशेषताएँ :

- १) इस्तेमाल करने में आसान ।
- २) हाई स्पीड ग्राइन्डिंग टेकनोलोजी ।
- ३) कम फ्रिक्शन कटींग ग्राइन्डिंग टेकनोलोजी ।
- ४) हेवी ड्युटी स्क्रीन सेट ।
- ५) हेवी ड्युटी फेब्रिकेशन स्ट्रक्चर ।
- ६) सुपर टेकनोलोजी ग्राइन्डिंग चेंबर ।
- ७) मेन्टेनन्स रहित मशीन ।
- ८) पिसाई घट रहित है ।

USE : All types of of Masala (Turmeric Finger, Red Chili, Black Pepper, Coriander, Cinnamon, Clove, Cumin etc.) Ayurvedic Herbs, Dry leaves, Fruit dried pulp etc.

FEATURES

1. Easy to Operate.
2. High Speed Grinding Technology.
3. Low Friction Cutting grinding technology.
4. Screen set.
5. Heavy duty fabrication structure.
6. High Quality electric motor.
7. Fine grinding.
8. Maintenance free.
9. Heavy duty grinding chamber.
10. No Wastage after grinding.

OPERATING INSTRUCTIONS

संचालित संबंधी आवश्यक सुचनाएँ :

- १) सबसे पहले पिसाई की जरूरत के अनुसार जाली चुनकर ग्राइन्डिंग चेम्बर में लगाईये ।
चेम्बर का दरवाजा बंध करे ।
- २) साईक्लोन के उपर के आउटलेट पर कपडा बांधे जिससे हवा (Air) बहार निकल सके ।
- ३) साईक्लोन के नीचे के आउटलेट पर कलेक्शन बेग लगवाएँ ।
- ४) एर आउटलेट विंडो ओपन करे ओर मशीन चालु करे ।
- ५) होपर में मटीरीयल्स डालीए ।
- ६) होपर फिडर विंडो धीरे-धीरे ओपन करे, जिससे मटीरीयल ग्राइन्डिंग चेम्बर में जा सके ।
- ७) होपर में डाला हुआ मटीरीयल पुरी तरह पीस जाये उसके बाद मशीन की स्वीच बंध करे ।
मटीरीयल पीसने के बाद चेम्बर को और जाली को ठीक से साफ करके ही अन्य
मटीरीयल पीसने के लीये डाले ।

सूचना :- अगर मशीन चालु में बंध हो जाये या ओवर लोड हो जाये तो चेम्बर में से
मटीरीयल निकाल के फिर से चालु कीजिए ।

OPERATING INSTRUCTIONS

- 1) First of all, set the filter net as per your grinding requirement then close the grinding chamber.
- 2) Please use the cloth at the outlet to collect grinding material.
- 3) Also cover the top side of the outlet by cloth for air circulation.
- 4) Turn the main open the Air Intel windows
- 5) Please fill the hopper by grinding material.
- 6) Lift the hopper window upside so material can go inside the grinding chamber from hopper.
- 7) Once the material will finish from the hopper then wait for few minutes cause some material left in grinding chamber to grind. Clean the grinding chamber before you grind another material.
- 8) Once you done with grinding, clean the grinding chamber and filters properly by brush.

NOTE : For any reason, If the machine will stop suddenly during grinding means material overloaded in grinding chamber so clean it out and start again.

OPERATING CAPACITY

MOTOR 1440 RPM	GRINDING CHAMBER SIZE	GRINDING CAPACITY PER HOUR
2 HP (ECO MODEL)	4" x 8" (5 mm)	30 - 35 kg
3 HP (ECO MODEL)	5" x 10" (5 mm)	50 - 55 kg
5 HP (ECO MODEL)	6" x 12" (6 to 8 mm)	80 - 90 kg
7.5 - 10 HP (SUPER MODEL)	7" x 13" (8 mm)	125 - 140 kg
10 - 12 HP (SUPER MODEL)	8" x 14" (10 mm)	180 - 200 kg
12 - 15 HP (SUPER MODEL)	9" x 15" (12 mm)	250 - 300 kg
15 - 20 HP (SUPER MODEL)	10" x 16" (12 mm)	300 - 400 kg
20 - 25 HP (SUPER MODEL)	12" x 16" (12 mm)	400 - 500 kg
25- 30 HP (SUPER MODEL)	16" x 20" (12 mm)	500 - 600 kg
40 - 50 HP (SUPER MODEL)	18" x 30" (15 mm)	750 - 900 kg
50 - 60 HP (SUPER MODEL)	20" x 30" (15 mm)	1000 - 1300 kg
60 - 70 HP (SUPER MODEL)	24" x 24" (15 to 18 mm)	1400 - 1700 kg
70- 80 HP (SUPER MODEL)	24" x 30" (15 to 18 mm)	1800 - 2100 kg
80 - 90 HP (SUPER MODEL)	28" x 36" (15 to 18 mm)	2400 - 2700 kg
90 - 10 HP (SUPER MODEL)	30" x 40" (15 to 18 mm)	2800 - 3200 kg

OPERATING INSTRUCTIONS



Turmeric Finger



Red Chili



All Spices



Anwala (Gooseberry)



Dry Leaves

BE AWARE OF DUPLICATE LAXMI BRAND



Stoneless
Flour Mill



SS Pulverizer



MS Pulverizer



SS Pulverizer
Heavy Duty



MS Hammer
Pulverizer



Vertical Stone
Flour Mill

Authorised Dealer :

Masala Mixer Machine



 *Shubh Sagar* **INDUSTRIES** AHMEDABAD