

SINCE 1983

# VERTICAL STONE FLOUR MILL

The Most Powerful Grain and Masala Grinding Machine




EXPORTING TO 7 COUNTRIES



 *Shubh Sagar* **INDUSTRIES** AHMEDABAD

## STRUCTURAL & GRINDING INFORMATION

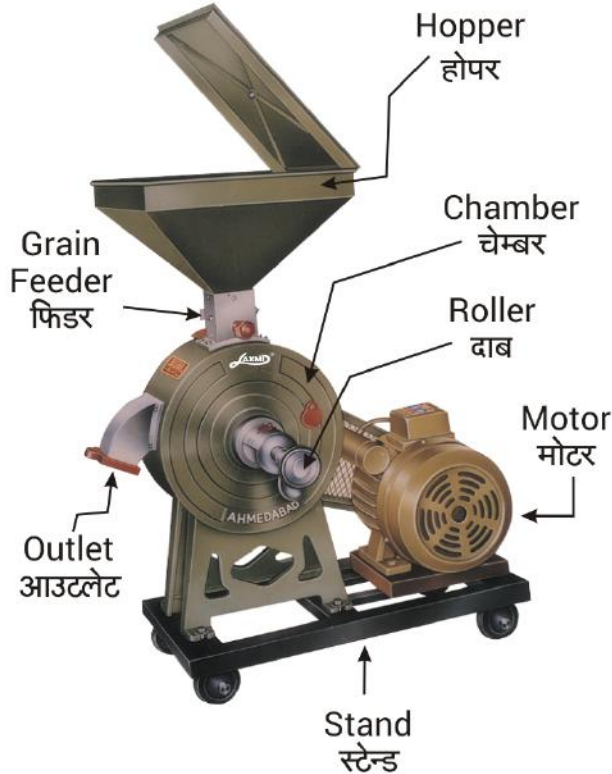

DRINDING MATERISL	2 HP I PH MOTOR	3 HP I PH MOTOR	5 HP I PH /7.5 HP III PH MOTOR	10 HP III Ph Motor
Wheat	20-25 kg	35-40 kg	65-70 kg	80-85 kg
Maize	20-25 kg	35-40 kg	65-70 kg	80-85 kg
Juwar	20-25 kg	35-40 kg	65-70 kg	80-85 kg
Rise	20-25 kg	35-40 kg	65-70 kg	80-85 kg
Dal	25-30 kg	30-45 kg	75-80 kg	90-95 kg
Masala	20-25 kg	35-40 kg	65-70 kg	80-85 kg

## USE & FEATURES

**USE :** All Types of Grains, Such as Wheat, Maize, Jowar, Rice, Daal etc.

सभी प्रकार के अनाज जैसे की गेहू, मक्का, जुवार, दाल, चावल, ईत्यादी

### FEATURES

- 1) Easy To Operate
- 2) High Speed Grinding Technology
- 3) Low Friction Cutting Grinding Technology
- 4) No Required An Filters So You Can Adjust The Flour Fineness
- 5) Heavy Duty Machine
- 6) High Quality Electric Motor
- 7) Heavy Duty Grinding Chamber
- 8) Fine Grinding
- 9) No Wastage After Grinding

### विशेषताएं :

- १) इस्तेमाल करने में आसान ।
- २) स्टोन ग्राइन्डिंग टेक्नोलोजी ।
- ३) कम फ्रिक्शन ग्राइन्डिंग टेक्नोलोजी ।
- ४) जाली की जरूरत नहीं ।
- ५) हेवी ड्युटी फेब्रीकेशन स्ट्रक्चर ।
- ६) हाई क्वालिटी ईलेक्ट्रीक मोटर ।
- ७) बारीक आटा ग्राइन्डिंग मशीन ।
- ८) पिसाई घट रहित है ।

# ***OPERATING INSTRUCTIONS***

## **PROCEDURE TO USE**

- First of all plug in the wire.
- Before you turn on the switch please make sure the roller isn't closed completely. (Rotate the Roller in clockwise means the stones inside the flour mill will be closer and if you rotate in opposite direction means it will be go away to each other.)
- Adjust the grain feeder on upward side.
- Then fill the hopper with grain.
- Turn on the Flour Mill switch.
- Slowly rotate the roller in clockwise direction so the stones close & it will be little bit noise of the stone collision. Means your grain is ready to grind.
- Then slowly down the grain feeder so grain will go down in to the grinding chamber and you will get flour from the exhauster.
- When your hopper will is empty fill more grain and if you want to change the grain or stop flour mill please follow below instructions.


## संचालित संबंधी आवश्यक सूचनाएँ :

- १) मशीन का प्लग लगाए ।
- २) दाब को खोलने के बाद ही मशीन चालु (ON) करे । (दाब को घड़ी की दिशामें घुमाने से दाब बंद होता है और घड़ी की उल्टी दिशामें घुमाने से दाब खुलता है ।)
- ३) फिडर को उपर सेट करे जिससे अनाज चेम्बर में न जा सके ।
- ४) होपर को अनाज से भरे ।
- ५) स्वीच चालु करे ।
- ६) दाब को घड़ी की दिशामें धीरे धीरे घुमाये जिससे दोनो पथ्थर पास आयेंगे ।
- ७) पथ्थर घीसने की आवाज आये तब फिडर को नीचे की ओर जरूरत के मुताबीक सेट करे ।
- ८) अगर चक्की बंद करनी हो या कोई और अनाज पीसना हो तो नीचे की सूचनाएँ ध्यान से पढ़ें ।
- ९) होपर का अनाज खतम होने के बाद ग्राईन्डींग चेम्बर में अनाज पीस जाने तक इंतजार करे ।
- १०) थोड़ी देर बाद आटा बहार आना बंद हो जायेगा । दाब को घड़ी की उल्टी दिशामें घुमाये और वापस दाब को घड़ी की दिशामें घुमाये । (ऐसा ३-४ करे जिससे चेम्बर साफ हो जाये ।)
- ११) मशीन को ठिकसे साफ करे ।



## ***OPERATING INSTRUCTIONS***

- When grain will finish in the hopper but still in the grinding chamber so wait until the grinding chamber empty.
- After couple of minutes, when there's no more flour will come out thru exhauster means there's no grain in the grinding chamber.
- Slowly rotate the roller in anti-clock wise direction then slowly rotate to clockwise direction. (Do it 3-5 times)
- The rest grain and / or flour will come out after some time. (Grinding Chamber will be empty.) Means its ready to another type of grain grinding.
- If you don't want to grind anything then please clean the flour exhauster using brush.

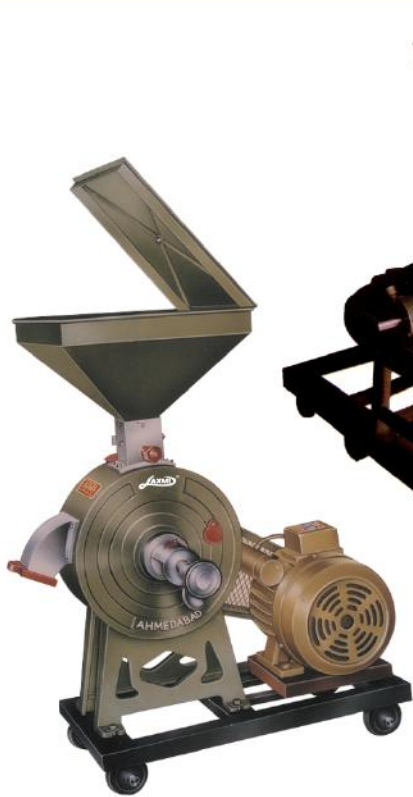

# BE AWARE OF DUPLICATE LAXMI BRAND



Stoneless  
Flour Mill



SS Pulverizer



MS Pulverizer



SS Pulverizer  
Heavy Duty



MS Hammer  
Pulverizer



Blower Pulverizer



Vertical Stone  
Flour Mill



Sewai Machine

Authorised Dealer :



*Shubh Sagar* **INDUSTRIES** AHMEDABAD

